
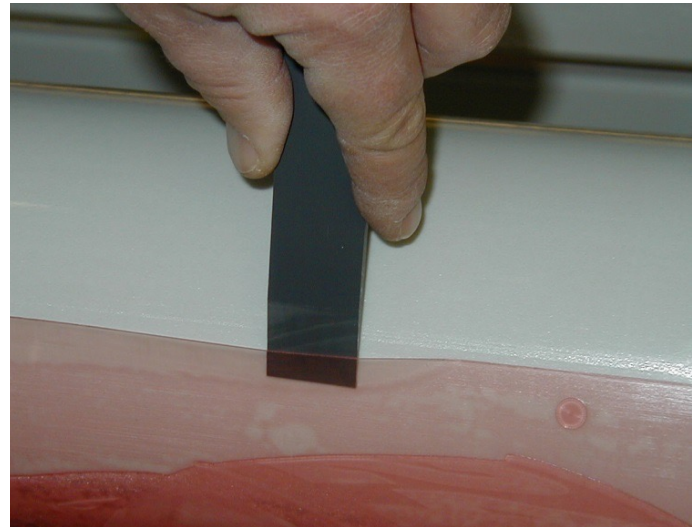


Plate demounting

The correct demounting procedure is important to ensure that the plates are in good condition for future use. To demounting the plate, we recommend using a blunt instrument, for example a stainless steel or plastic spatula. Sharp objects or knives should not be used. Avoid creasing the polyester base.

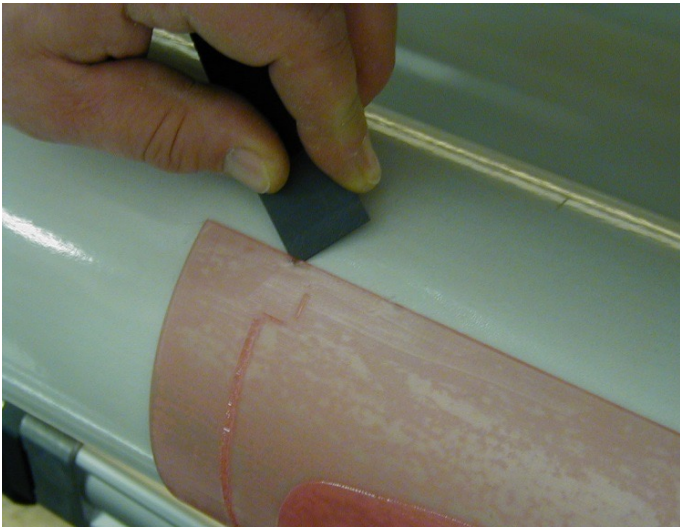

1 - Hold the tool at an angle of 45°. Insert the tool in the corner under the base and run along the edge until the plate is released from the tape.

2 - Slide the tool gently along the top of the plate. Hold and release the plate at a low angle, using even pressure, to minimize stretching.



cyrel.com

For more information on DuPont™ Cyrel® or other DuPont Industrial Solutions, please contact your local representative.

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. It may be subject to revision as new knowledge and experience becomes available. This information is not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of our products for your particular purposes. Since we cannot anticipate all variations in end-use and disposal conditions, DuPont makes no warranties and assumes no liability in connection with any use of this information. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent right.

DuPont™, the DuPont Oval Logo, and Cyrel® are trademarks or registered trademarks of DuPont or its affiliates. Copyright © 2021 DuPont de Nemours Inc. All rights reserved.